



注意：取下和安裝刀片時，切勿用手直接接觸刀片。

產品名稱：飛利浦充電式除毛球機  
產品型號：GCA2100  
額定電壓：2.4V ~  
總額定消耗電功率：3W  
充電電壓：5V ~  
額定輸入電流：150mA  
產地：中國  
規格：充電式  
製造年份及號碼：請見機體標示，前兩碼為西元年，整體號碼為製造號碼  
委製廠商：DAP B.V.  
進口廠商：台灣飛利浦家電股份有限公司  
地址：台北市大安區仁愛路3段136號10樓  
電話：0800-231-099  
網址：www.philips.com.tw

PHILIPS

GCA2100



EN User manual

TC 使用手冊

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

Important

Read this user manual carefully before you use the appliance and save it for future reference.

- Danger**
- Never immerse the appliance in water.
  - Children shall not play with the appliance.
  - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - Do not open and remove the blade guard and fluff compartment during use.
  - Do not use the appliance if it shows visible damage or if the blade unit or blade guard is broken.
  - Do not let pointed objects come into contact with the blades and rotating shaft during use.
  - Do not switch on and use the appliance when charging or when performing cleaning and maintenance.
  - Keep your fingers and hand away from the blades and rotating shaft during cleaning and maintenance.

- Caution**
- This appliance contains batteries that are non-replaceable.
  - Only connect this appliance to a USB port. Make sure that you connect the appliance to a 5Vdc USB charger.
  - Switch off the appliance when it is charging.
  - Remove the USB cable after charging for 6 hours. Note that the charging light will remain on as long as the USB cable is plugged in, and does not indicate the charging status.
  - The appliance is intended for garments only.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Using the appliance

Make sure you smooth out the garment on a flat surface. Do not press the appliance onto the garment too hard. Do not use the appliance on embroideries, zips, buttons and loose threads.

Cleaning and maintenance

For extra safety, the blades stop rotating automatically when you remove the blade guard.

**Note:** Do not wash the base with water.

Environment

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products and batteries.



**Removal of built-in rechargeable battery**  
The built-in rechargeable battery must only be removed by a qualified professional when the appliance is discarded. Before removing the battery, make sure that the appliance is disconnected from the wall socket and that the battery is completely empty.

**Removing the rechargeable battery**  
Undo the screws, open the casing, take out the printed-circuit board and cut the metal tabs to detach the battery.

Guarantee and support

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the separate worldwide guarantee leaflet.

**Note:** *The guarantee does not cover wear and tear of the blade unit.*

繁體中文

簡介

感謝您購買本產品。歡迎來到飛利浦的世界！請至 [www.philips.com/welcome](http://www.philips.com/welcome) 註冊您的產品，以獲得飛利浦提供的完整支援。

重要事項

在使用本產品前，請先仔細閱讀本使用手冊，並保留使用手冊以供日後參考。

- 危險**
- 切勿將本產品浸泡於水中。
  - 請勿讓孩童把玩產品。
  - 本產品不適合交由身體、知覺或精神能力障礙者或經驗與知識缺乏者 (包括孩童) 使用，除非由負責他們安全的人員提供安全使用產品相關的監督或指示說明。
  - 請勿在產品使用時打開並取下刀片安全防護及毛絮槽。
  - 如產品本身有明顯損傷，或是刀片座或刀片安全防護破損，請勿使用。
  - 使用期間，請勿將尖銳物品接觸刀片及轉軸。
  - 進行充電或清潔與維護時，請勿啟動並使用產品。
  - 進行清潔與維護時，請確保手指與雙手遠離刀片及轉軸。

- 注意**
- 本產品隨附的電池不可更換。
  - 請僅將本產品連接至 USB 埠。請確認產品連接的是 5Vdc USB 充電器。
  - 產品充電時請關閉電源。
  - 充電 6 小時後，請拔掉 USB 纜線。請注意，只要 USB 纜線沒有拔掉，充電指示燈就會持續亮起，而且不會指示充電狀態。
  - 本產品僅限用於衣物。

電磁場 (EMF)

本飛利浦產品符合所有電磁場暴露的相關適用標準和法規。

使用本產品

請務必在平坦表面上撫平衣物。將產品壓於衣物上的力道切勿過大。請勿將產品用於刺繡、拉鍊、鈕扣及線頭。

清潔與維護

為了提高安全性，當您取下刀片安全防護時，刀片會自動停止旋轉。  
**備註：**請勿用水清洗底座。

環境保護

- 此符號表示電氣產品及電池不得與一般家用廢棄物一併丟棄。
- 請遵循您所在國家/地區對電氣產品及電池的分類收集規定。



**取出內建充電式電池**  
丟棄產品時，僅能由合格的專業人員取出內建充電式電池。取出電池前，請先確認產品已與電源插座中斷連接，且電池電力完全耗盡。

取出充電式電池

鬆開螺絲，打開外殼，取出印刷電路板，剪斷金屬突片以拆下電池。

保固與支援

如需相關資訊或支援，請造訪 [www.philips.com/support](http://www.philips.com/support)，或另行參閱全球保證書。

**備註：**保固範圍不包含磨損與破損的刀片座。

故障類型和處理方法

問題	可能的原因	解決方法
產品無法去除毛球。	產品內部毛球累積過多。	清潔產品 (圖 6-12)。
刀片不會旋轉。	刀片罩未正確旋緊。	請檢查並確認刀片罩已正確旋緊。
	電池電量耗盡 (LED 指示燈閃爍)。	為電池充電。